

## Schiedel Protect Box

Installation instructions

DON'T FORGET TO REGISTER YOUR INSTALLATIONS AND START EARNING SCHIEDEL INSTALLER REWARDS See inside for more details

www.schiedel.com/uk March 2023

## Installation Instructions




Existing vapor barrier




Square section cut out of barrier




EPDM mat pulled down onto outer bead of ISC50 adapter

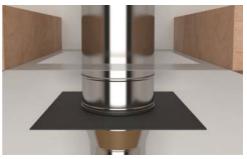

EPDM mat pulled up over joint until level with barrier

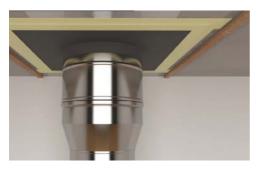

EPDM is attached to the vapour barrier using special tape supplied with EPDM kit

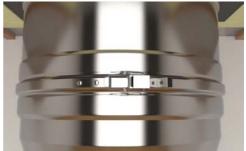

Locking Band connected

## Installation Instructions



Protect Box lowered into position and fastened securely to the joints



Additional components installed and secured with locking bands



Insulation replaced around Protect Box



2-piece fire stop plate attached securely to joists



Ready!



Schiedel Chimney Systems Ltd.

Crowther Estate
Washington
Tyne & Wear NE38 0AQ
Tel. +44 (0)191 416 1150

sales.uk@schiedel.com | www.schiedel.com/uk

